

Manual for JURA Hot Air Gun

Please take the following in account before using the JURA Hot Air Gun!

- * Make sure that the JURA Hot Air Gun is properly connected to Air Supply and the Compressor is switched on and set on **80 psi / 5,5bar!**
- * Cold Air: Pull the trigger half way.
- * Hot Air: Pull the trigger all the way.
- * Cool after heating: Let go of the trigger half way and wait for a few seconds until the air start to cooling down.
- * The JURA Hot Air Gun comes standard with 4mm tube. Depending on your situation, you might need a connector. Please contact your local hardware store for advice.

Please note that we don't give any warranty when the instructions above are not been followed properly!