
QUICK SET UP INSTRUCTIONS GraverMax G8



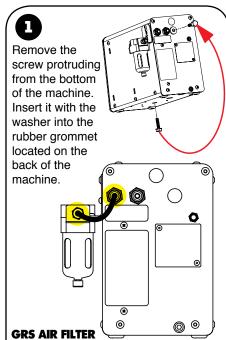

Connect the air filter to the GraverMax G8 by loosening the side cover screw and sliding the bracket onto the screw. Re-tighten screw.

Find the black hose 139mm (5 1/2"). Connect one end to the air input quick connect fitting on the back of the machine and the other end to the straight quick connect fitting.


Connect the air compressor hose to the 90° quick connect fitting or the barbed fitting supplied.


NOTICE: This machine requires clean, dry oil-free air. We suggest using an oil free compressor. If vour compressor is an oil type. you MUST have an oil removal filter, coalescing type (#004-579 or equivalent), in the air supply line to this machine. If you are unsure of this requirement, please call 800-835-3519 and ask for Technical **Services. OIL CONTAMINATION IS** NOT COVERED BY WARRANTY.

; YVf~ XYf 6 c`Ym; a V< / '7 c"?; R Jã • Ë 4 Jå^ L Ë Ú d ÉÁHG ÖËÄ, €ÍJÏÄÜc`cc*æloÁÐÁÕ^¦{æ), î

Phone: Él JÁGEDÁ FFÁZÁFHG FÉE Fax: Él JÁQ€DÁ FFÁÄFHG FËJ€

E-mail: 3 4 O à[|^ È k k k "Vc YmXY

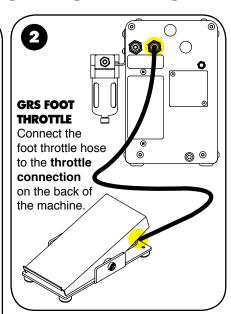

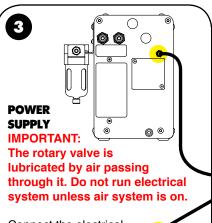

power cord into the box. Plug the converter cord into the jack on the back of the machine.

4 **GRS IMPACT HANDPIECE** Connect the handpiece hose to one of the handpiece quick connect fitting. Move the handpiece selector knob to the corresponding handpiece quick connect fitting you are using.

ROTARY

Connect the rotary handpiece hose to the handpiece quick connect fitting above the auxiliary air open/close knob. Turn the auxiliary air open/close knob counter-clockwise to

HANDPIECE allow air to flow.

SPECIAL NOTE: When using the NSK High Speed Handpiece do not exceed 2.5bar (35psi).

HANDPIECE TUNING

Move the handpiece selector knob to the corresponding handpiece quick connect fitting you are using. Set the

stroke per minute (A) to 2300. Set the main air regulator knob (B) to $0.1 \sim 0.4$ BAR (2~5 PSI). Close the bias control valve (C).

Hold the handpiece you have selected to use vertically, tool holder end up, next to your ear. Without depressing the foot throttle or palm control, SLOWLY increase the air pressure until the handpiece



begins to buzz. Continue to increase the air pressure until the handpiece vibrates and knocks. Slowly add air pressure until the knocking stops. This is the perfect air pressure for each handpiece. Now you are free to move the SPM (strokes per minute) dial to whatever setting desired.